

emotion of sauna.



Herkules S60 / S60 vapor



(GB) Assembly and operating instruction

MADE IN GERMANY



Druck-Nr.: 29343633en /22.10

English

Table of Contents

Intended use	3
General notes	3
Important notes	4
Electrical connection	5
Example of a properly connected sauna system Herkules S60	6
Technical data	6
Example of a properly connected sauna system Herkules S60 vapor	7
Technical data	7
Assembly Instructions	8
Contents	8
Minimum distances	8
Temperature safety device	9
The optional fixed water connection	10
Assembly of the protective cover on the sauna heater	12
Using a Finnish sauna	13
Air conditioning operation (only with the Herkules vapor)	13
Filling the evaporator	13
Emptying the evaporator	13
Operation with vaporizer	14
De-scaling of the vaporizer	14
Sauna stones	15
Maintenance and care	15
Service Address:	17
Guarantee	17
Handling procedures for return shipments (RMA) - Details for all returns !	18

Dear Customer,

You have purchased a high quality technical system which will provide you with many years of enjoyable sauna bathing. This sauna heating system was constructed in accordance with state-of-the-art European safety standards, inspected and manufactured in accordance with the Quality Standard DIN EN ISO 9001:2000.

This detailed installation and user's guide was created for your information. Please note especially the important information and the data dealing with the electrical connection.

We wish you a richly invigorating and restorative sauna bathing experience.

First of all, check whether the sauna system has arrived at your site undamaged. Register transport damage claims immediately with the delivering transport company or please consult the supplier who provided the equipment to you.

Intended use

This sauna heater is exclusively designed for the heating of sauna cabins, in connection with an appropriate control unit.

Any use apart from the defined application shall be regarded as non-intended use. Adherence to the conventional operating, maintenance and servicing conditions is also part of the intended use.

The manufacturer cannot be made responsible for deviating alterations undertaken on the authority of the user and any consequential damage. The risk for such measures shall be borne solely by the person carrying out the alterations and causing the damage.

Sauna heaters, with the exception of those used for household purposes, must be equipped with a safety device vis-à-vis the cover per DIN EN 60335-2-53.

As suitable measure, and depending on the sauna heater, a rocker switch Type I or Type II may be installed above the heater.

(The rocker switch is not included in the delivery scope of the sauna heater.)

For installation and electrical connection of the rocker switch follow the installation instructions supplied with this part.

General notes

Please note that an optimal sauna climate can be reached only when the cabin, with its air intake and exhaust, the sauna heating unit and the control unit have been tuned for compatibility with one another.

Please note all data and information provided by your sauna supplier.

The sauna heating units warm your sauna cabin through means of heated convection currents. To this end, fresh air from the air intake vent is drawn in, rises upon warming (convection) and is then circulated through the cabin. A part of the used air is pushed out through the exhaust vent in the cabin. This is the means by which the typical sauna climate develops, reaching characteristic temperatures of about 110° C directly under the ceiling of your sauna, which fall off to about 30-40° C in the floor area due to the temperature gradient in the sauna cabin. Therefore, it is not unusual when, for example, temperatures of 110° C prevail in the area of the temperature sensor over the oven, while the thermometer, which is installed 20-25 cm under the cabin ceiling on the sauna wall, registers only 85° C. With a temperature setting at maximum, the mean bathing temperature lies between 80° C and 90° C in the area of the upper recliner bench.

Please note that the highest temperature values in the cabin always develop in the area above the sauna heating unit and that the temperature sensor and safety limiter must be installed in this area in accordance with the control unit installation guide.

At the initial heating, you may notice a slight odor arising from evaporation of substances from the manufacturing process. Air out your cabin after this cycle before you begin with the sauna bath

Important notes

 **If assembled incorrectly, the system will present a fire hazard. Please read this installation guide thoroughly. It is especially important to consider applicable dimensions and observe the following instructions:**

- This device has not been designed for being used by persons (including children) that are physically or mentally handicapped or have sensory disabilities. Moreover, it is not allowed to use this device without sufficient experience and/or knowledge, unless these persons will be supervised by persons responsible for their security or in case they have been instructed how to use this device.
- Children are to be supervised in order to make sure that they do not play with this device.
-  The installation and connection of the sauna heating unit, control unit and other electrical equipment must be accomplished only by an expert. In this regard it is especially important to meet the required safety precautions in accordance with VDE 0100 v. §49 DA/6 and VDE 0100 part 703/2006-2.
- The sauna heating and control units may be installed only in sauna cabins made of suitable, low resin and untreated material (for example: Nordic pine)
- Only a sauna oven with the appropriate heating capacity may be installed in the sauna cabin (see Table 2).
- There should always be a provision for air intake and exhaust vents in every sauna cabin. The air intake vents must always be aligned behind the sauna heating unit, ca. 5 to 10 cm above the floor. Please use the minimum dimensions of the air intake and exhaust vents listed in Table 1.
- The exhaust vents must always be placed towards the sauna heating unit diagonally in the rear sauna wall, lower area. The air intake and exhaust vents must not be closed. Please observe the information provided by your sauna cabin supplier.
- For the adjustment and control of the sauna heating unit, one of the control units mentioned later must be used. This control unit must be attached to a suitable location on the outer wall of the cabin, the associated sensor housings in the interior of the sauna cabin in accordance with the installation guide which accompanies the control units.
-  Caution: Covering and improperly filled stone receptacles present a fire hazard.
-  Make certain that no objects have been placed on the sauna heating unit before each start-up.
-  Caution: High temperatures on the heating unit during operation can cause burns on contact.
- The sauna heating unit is not intended for installation or placement in a niche under the bench or under a roof slope.
- Do not start up operation of the sauna heating unit with air intake vents closed.
- The cabin lighting with corresponding mounting must be of a type that it is splash-proof and able to withstand a surrounding temperature of 140° C. Therefore, only a VDE-certified sauna lamp of 40 W maximum may be installed for use with the sauna oven.
-  The sauna system (sauna heating unit, control unit and lighting etc.) may be hard-wired to the power source only by a locally certified electrician. All connecting lines laid on the inside of the cabin must be made of silicone and be able to withstand a surrounding temperature of at least 170°C. If single-wired cables are used as connecting lines, they must be protected by flexible metal tubing. The minimum diameter of the connecting line and the suitable cabin size in proportion to the power supply capacity are listed

in the table.

- During the installation of the sauna heating unit, make certain that the vertical clearance between the upper edge of the sauna heating unit and the sauna ceiling is sufficient. The horizontal (lateral) clearance between the sauna heating unit and the cabin wall is provided in the dimension diagram of the respective sauna heating unit. The required distance between the lower edge of the sauna heating unit and the floor is also provided by the dimension diagram. In case of floor-standing ovens, the distance is determined by the base.
- Fundamentally, it is important to make sure that the sauna heating unit is not placed on a floor that consists of an easily flammable material (wood, synthetic flooring or similar material). Ceramic tiles or similar materials are practical in the area of the sauna.
- Underfloor heating in a sauna leads to increased surface temperature of the floor.
- The distance between the oven safety grid or recliner bench and other flammable materials and the sauna heating unit are provided in the dimensional data of the respective sauna heating unit. The safety grid height must be approximately equal to the frontal height of the sauna heating unit.
-  By cleaning of parts with sharp edges or corners the appropriate personal protection measures against potential injuries should be taken.

Electrical connection

Your electrician will be able to accomplish this work without further explanation in accordance with the provided wiring schematic and with the help of the circuit diagram mounted inside the respective control unit.

Be sure to note, however, that live wires should not be visibly laid onto the inner cabin walls due to safety considerations. For this reason, the wall element with the air intake vent is already equipped with cable conduits in most sauna cabins

Should there be no cable conduits in your cabin, drill an hole in the cabin wall immediately adjacent to the sauna heating unit where the cable projects from the sauna heating unit and pull the cable through this hole towards the exterior and then to the control unit. The cable as well as all other connecting lines (supply wire to the power source and to the cabin lighting) on the outside wall of the cabin should also be protected from damage, for ex. by installation in cable conduits or by covering with wooden skirting strips.

Attention!


Dear customer,

according to the valid regulations, the electrical connection of the sauna heater and the control box has to be carried out through the specialist of an authorized electric shop.


We would like to mention to the fact that in case of a warranty claim, you are kindly requested to present a copy of the invoice of the executive electric shop.

Example of a properly connected sauna system Herkules S60

9 kW

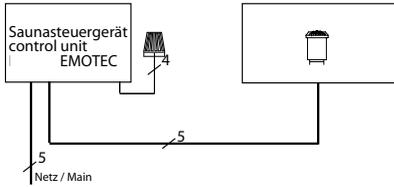


12 / 15 kW

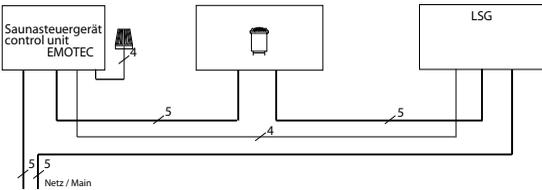


Caution! Always make certain to include neutral conductor N clamp


9 kW

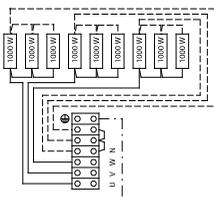

12 kW

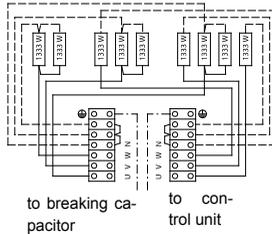

15 kW

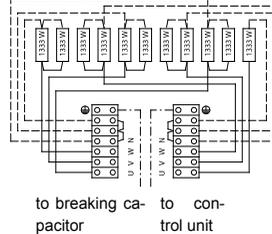

Capacity acc. DIN	Electrical Connection	Fuse control unit in A	Fuse LSG in A	Connecting cable main - control unit in mm ²	Connecting cable main - LSG in mm ²	Connecting cable control unit - heater in mm ²	Connecting cable LSG - heater in mm ²	Connecting cable control unit - LSG in mm ²
9,0 kW	3N AC 50 Hz 400 V	3 x 16	--	5 x 2,5	5 x 2,5	5 x 1,5	--	--
12,0 kW			3 x 16				5 x 1,5	4 x 1,5
15,0 kW			3 x 16				5 x 1,5	4 x 1,5


All cross sections of a line are minimum diameters in mm² (Copper line)

Technical data


Capacity acc. DIN	Installation dimensions H/W/D cm	For cabin size	Minimum dimensions of air intake and exhaust vents	Weight without stones without package	Stone filling	Power switch gear (LSG) needed	For operation with control units
9,0 kW	85 / 51 / 53	9 - 14 m ³	35 x 6 cm	43 kg	60 kg	no	EMOTEC DC 9000 EMOTEC DC 9000 DB/DL/DLF EMOTEC HCS 9003 EMOTEC HCS 9003 DB/DL/DLF EmoTouch II PB/AF/GF
12,0 kW		14 - 18 m ³	35 x 7 cm				
15,0 kW		18 - 25 m ³	35 x 9 cm				

Example of a properly connected sauna system Herkules S60 vapor

9 kW

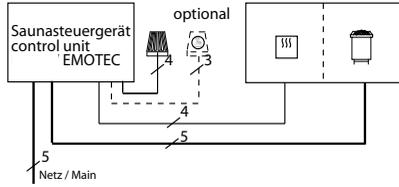


12 / 15 kW

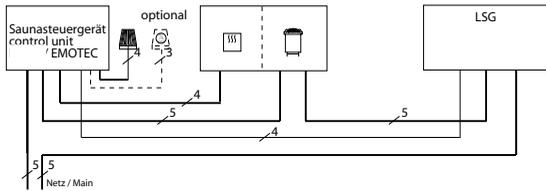


Caution! Always make certain to include neutral conductor N clamp


9 kW

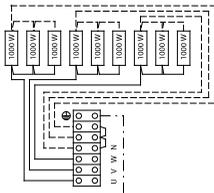


12 kW

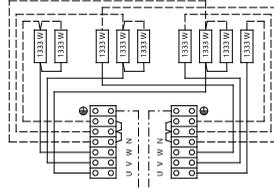

15 kW

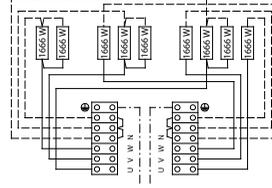

Vaporicer

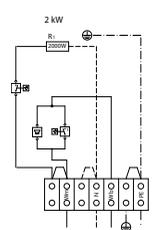

to breaking capacitor

to control unit

to breaking capacitor

to control unit

Capacity acc. DIN	Vaporicer	Electrical Connection	Fuse control unit in A	Fuse LSG in A	Connecting cable main - control unit in mm ²	Connecting cable main - LSG in mm ²	Connecting cable control unit - heater in mm ²	Connecting cable LSG - heater in mm ²	Connecting cable control unit - LSG in mm ²
9,0 kW	2,0 kW	3N AC 50 Hz 400 V	3 x 16	--	--	--	--	--	--
12,0 kW				3 x 16	5 x 2,5	5 x 1,5 & 4 x 1,5	5 x 1,5	4 x 1,5	
15,0 kW				3 x 16	5 x 2,5	5 x 1,5 & 4 x 1,5	5 x 1,5	4 x 1,5	

All cross sections of a line are minimum diameters in mm² (Copper line)

Technical data

Capacity acc. DIN	Vaporicer	Installation dimensions H/W/D cm	For cabin size	Minimum dimensions of air intake and exhaust vents	Weight without stones without package	Stone filling	Power switch gear (LSG) needed	For operation with control units
9,0 kW	2,0 kW 8 l	85 / 53 / 53	9 - 14 m ³	35 x 6 cm	53 kg	60 kg	--	EMOTEC HCS 9003 EMOTEC HCS 9003 DB/ DL/DF EmoTouch II PB/AF/GF
12,0 kW			14 - 18 m ³	35 x 7 cm			EMOTEC L09	
15,0 kW			18 - 25 m ³	35 x 9 cm			EMOTEC L09	

Assembly Instructions

Contents

The contents are as follows:

- 1 Sauna heater
- 4 sauna stone units packed separately in a woven sack
- 1 evaporator dish
- 1 accessories bag containing Danger plate and
- 2 screws (4.2 x 9.5)

When used for commercial purposes, the sauna heater may only be used in combination with the rocker switch Type I Art. No. 94.4421.

The Danger plate must be fixed so that it is clearly visible and close to the sauna heater.

Minimum distances

The minimum height of the sauna cubicle is 1.90 m on the inside

- When you are assembling the sauna heater you must ensure that the vertical distance between the top edge of the sauna heater and the sauna ceiling is at least 105 cm and that the horizontal (at the side) distance between the heater and cabin wall is at least 4 cm (Fig. 1).
- The distance from the heater grid and the bench to other inflammable materials near the heater must be at least 4 cm. The heater grid must be more or less the same height as the front of the heater.
- The wooden bar is not intended to prevent anyone from touching the heater. Depending on how the cabin is being set up it is essential to have a suitable protection bar fitted by the manufacturer.

Herkules S60 vapor

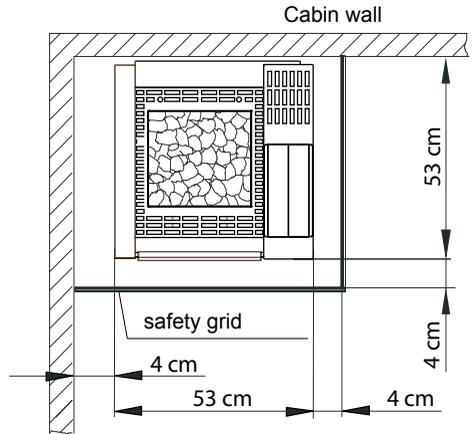


Fig. 1

Herkules S60

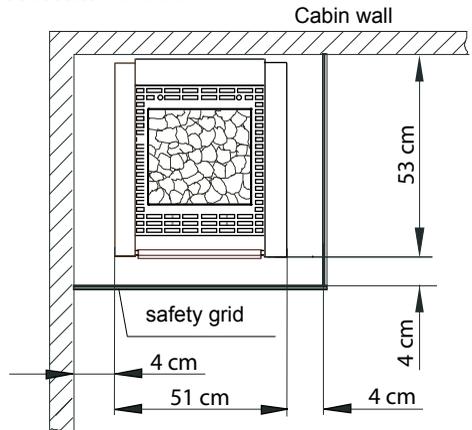


Fig. 1a

- Complete the connections as shown in the circuit plan.
The circuit plan is affixed to the inside of the connection box lid.
- Connect the unit to the control unit.
Make certain that you have complied with the local electricity board and the VDE recommendations.
- Place the lid on the connection box. Use 2 metal screws for this.

Temperature safety device

For safety reasons the connection box for the evaporator has a temperature safety device (STB). If the evaporator indicates that it is not operating you must first check this device (STB).

After it has been released it has to be returned mechanically to the correct position.



Danger

Before you start to work make sure that nothing is connected to the mains

In order to get to the evaporator connection box you must remove the right-hand side of the cover.

First you must loosen the two fixing screws on the bottom of the frame holding the evaporator dish.

Then you will be able to remove the lower frame together with the evaporator dish (Fig. 2).

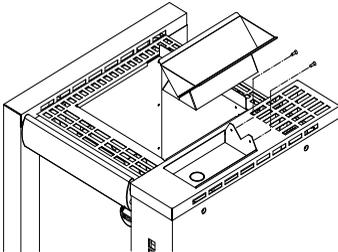


Fig. 2

Remove the cover by loosening the two screws on the back. Next remove the lid by pulling it upwards. Now you will be able to pull out the water trap from the evaporator pipe (Fig. 3).

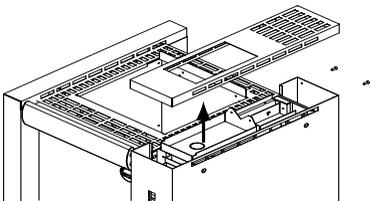


Fig. 3

Loosen the screws holding the connection box cover and open the connection box (Fig. 4).

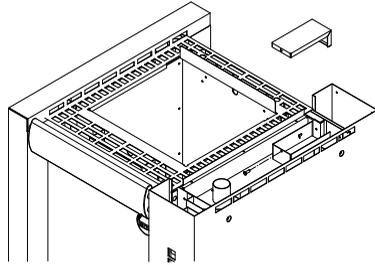


Fig. 4

Return the temperature safety device (STB) by pressing the pin on the back into the case until it can go in no further..

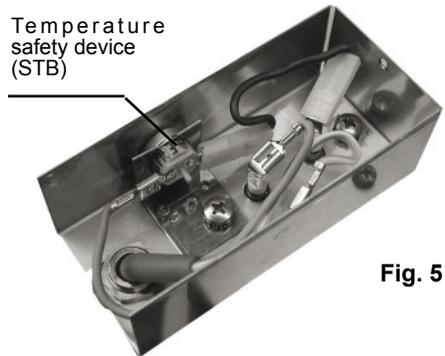


Fig. 5

The optional fixed water connection

(only by vapor version)

ItemCode 94.2599

With this fixed-water-connection, you got the possibility of a permanent water-supply.



Important Information:

The rules of the EN 1717 as well as the DIN 1988 part 4 are to respect. It is important to prevent that the water can't flow back into the drinking water-management-system. Pipe or system separator are suitable for example.

Please ask your drinking water supplier or in a authorized sanitary specialized trade if necessary.

Fixed-water-connection for the additional installation at heaters with vaporizer to the automatic filling from the water pipe-network. Installation at the back side of the heater.

Connection by steel flex-hose.

A plunger (1) opens or closes the volve (2), so that you can be sure your container is always full.

The levers (3) serves for the adjustment of the closing strength. Turn to the left indicates a greater closing strength.

Hose-connection: 1/2"-screw thread.

Installation

- Please use Teflon gasket strips for seal up all the connection screws.
- Screw in the 1/2" Messing-T-piece on one side the 1/2" plug with the enclosed sealing.
- Screw at the opposite the 1/2" hose-clip.
- At the lateral outflow of the T-piece, please screw in the enclosed steel-hose.
- Put the enclosed piece of silicone-hose on the hose-nozzle of the drain plug from the vaporizer and secures it with the enclosed hose-clamp.

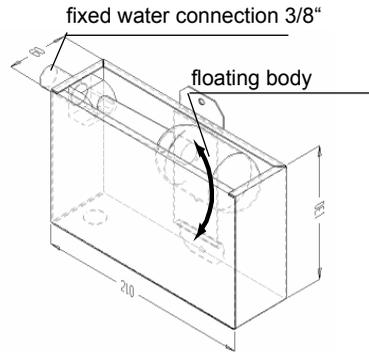


Fig1a

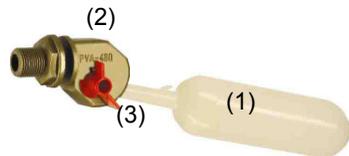


Fig1b



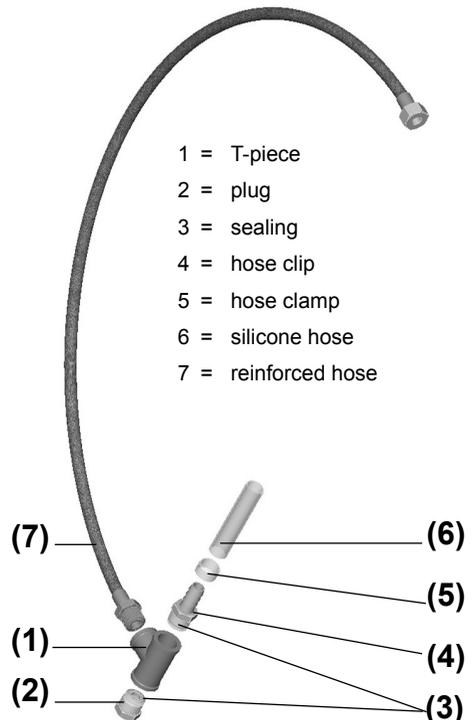


Fig 2

- Put before mounted adapter-piece with the hose-nozzle into the open end of the silicone-hose. Secure it with the hose-clamp.

Assembly of the water supply tank

- Screw the water supply tank into the back-side with the help of 2 self-tapping screws B4, 2x9.5.
- Assemble now the floating valve in the tank. Pay attention to the floating body which should accomplish a bouncing and which should not attach to the tank barrier.
- A 3/8" screw thread is located on the out-flow of the floating valve. From this point on, an individual connection of the feed line to the fixed water connection is possible.

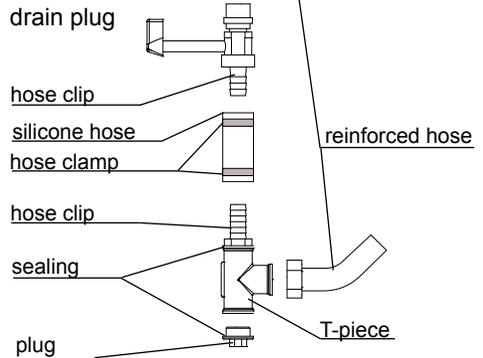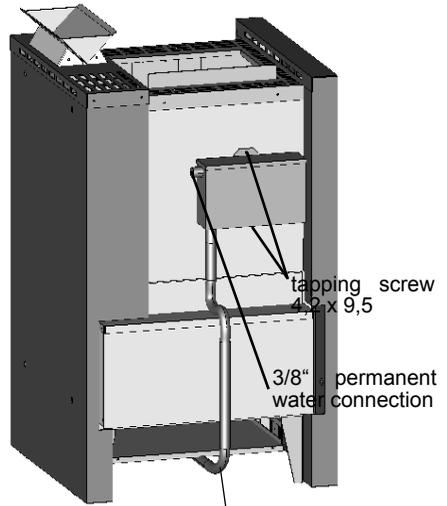


Please note that:

A gate valve has to be installed between the fixed net and the fixed water connection. If the fixed water connection is not used for a long time, the gate valve should be closed.




Attention: max. operating pressure 6 bar

In the case that the holes for assembly on the backside of the sauna oven are lacking, drill 2 mounting holes \varnothing 3.4 mm into the back according to the specification.

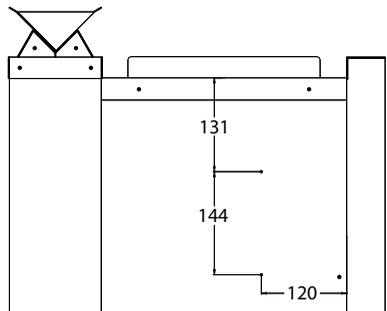

Assembly of the protective cover on the sauna heater


Herkules S60

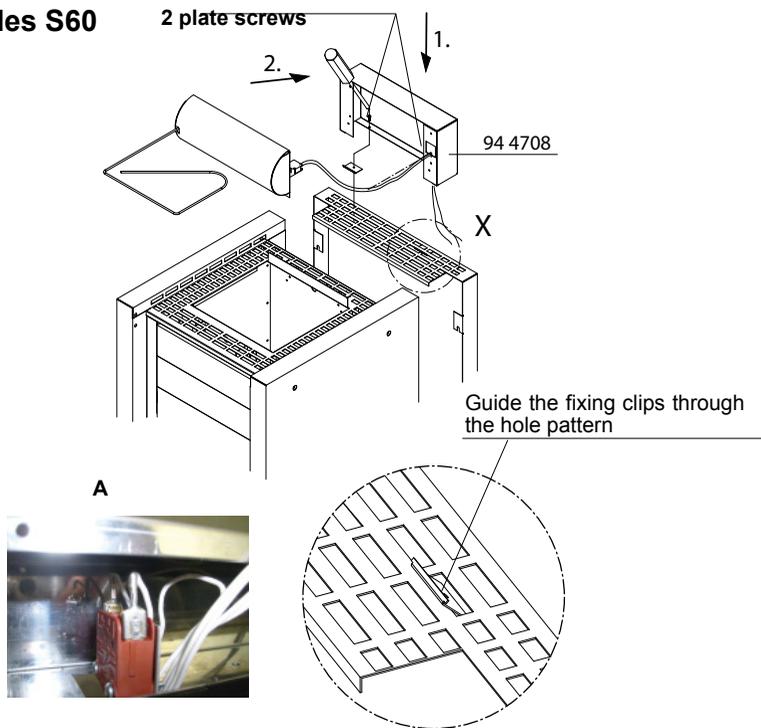

X

All plate screws for suspension of the heater protector.
All metric screws: for mounting the rocker switch
All dimensions provided in mm.

Herkules S60 Vapor

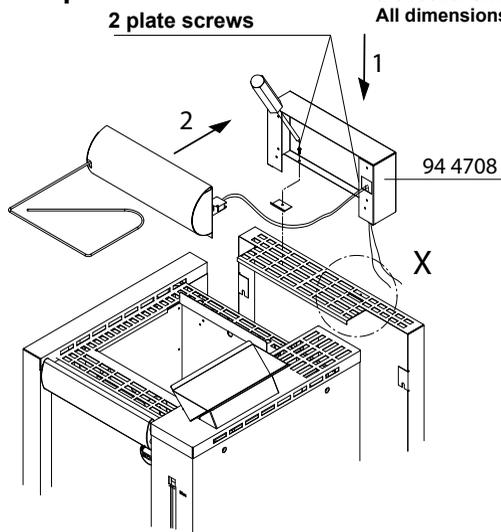

Using a Finnish sauna

In this form of operation the evaporator is not in use. It is imperative to ensure that no herbs or essence are in the evaporator dish, because they could catch fire as a result of over-heating. Essences or any other kind of additive to be added to the water you pour only according to the manufacturers instructions.

When using any sort of infusion when your sauna treatment is over, you must not pour the water from the ladle too quickly over the stones: this is the only way of ensuring that the water vaporises completely so that the infusion can take full effect.

Never add more infusion or essential oil to the water being poured than is indicated on the pack. Never use alcohol or undiluted infusions. Danger! There is a risk of fire.



Danger: Always pour the water containing an infusion over the stones and never anywhere else.




When you are using the Finnish bath never put herbs or anything similar into the evaporator dish. **Fire risk**

Air conditioning operation (only with the Herkules vapor)

Filling the evaporator

When you are filling the evaporator by hand, always push back the dish first.

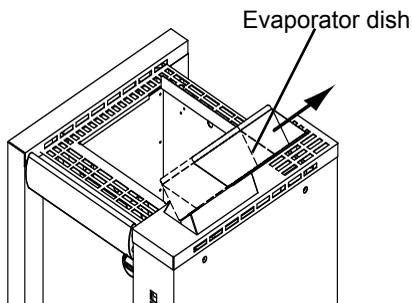

Danger

When the steam generator is operating the evaporation dish can become extremely hot. Thus always use something suitable to help you.

After you have filled the dish, it must be replaced in its original position.


Emptying the evaporator

The water outlet is behind the right-hand side. Put a suitable container underneath before turning on the drain cock. The container must be pushed as far as it will go under the side.

The drain cock is behind the

square cover fitted in the right-hand side. Push the cover upwards and then Pull it forwards to remove it.

Now turn on the drain cock.

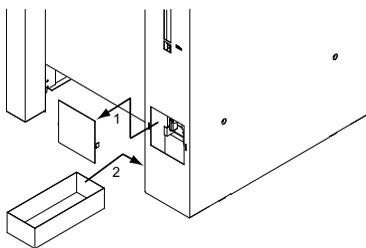

Operation with vaporizer

(only Bi-O heaters)

The control of the vaporizer is managed by the control unit. Either you receive a humidity value which is regulated by a variance comparison at the sensor or which is determined through a timing cycle.

Please note that the relative humidity varies greatly due to the varying temperature distribution in the cabin. The readings of the hygrometer and the readings at the control unit can for that reason be very different.

Guarantee that sufficient water is in the storage vessel

Never add essences, volatile oils or herbs to the water; instead add these to the herbal bowl on the lid of the vaporizer.

These volatile oils which are released through action of the hot, rising steam are automatically distributed throughout the cabin with the rising steam.

If the water supply in the vaporizer has been drained, a buzzing signal indicates the water storage. To continue your sauna session, you have to refill the tank after a 5 minutes stop of the sauna control or a changing to Finnish sauna for 5 minutes.

The heating rod in the vaporizer must cool down for 5 minutes before cold water is refilled.



Never pour water on the red-hot heating rod. Besides of the danger of scald, the heating rod could be damaged.

Fill in the water up to the upper water level marking.



Add herbs and essences to the herbal bowl only.



By adding essences or any other additives for air humidity, a health hazard cannot be removed. It is advised not to use those additives apart from the recommended ones by the manufacturer of the oven.

If additives are put in the water, this generally leads to a foamy boiling over of the water. In this case the water must be drained and the interior of the cold reservoir washed out with a cloth soaked in alcohol or mineral spirits. Even small remainders of essences on the vaporizer wall will change the natural molecular structure of the water.



Attention: Risk of scalding at the steam outlet. Essences and herbs are to be placed in the herb dish only.



Caution concerning control units with post-heating phase. Never leave the herbal bag in the herbal bowl during the post-heating phase after a moist steam session. These dry out rapidly in this case and a present a fire hazard!

For fire safety reasons only herbs in perforated aluminium bags may be used.

De-scaling of the vaporizer

Consult your water utility company to determine the hardness level of your water. In areas with hardness level 1 (1-7 German hardness levels), the system generally works without problems and must be de-scaled only when necessary.

Should your water lie within the hardness levels 2-4, the vaporizer must be de-scaled from time to time (in accordance with the hardness level).

To this end, add the de-scaling product for household appliances to the water in the vaporizer in accordance with manufacturer's instructions. Bring the water-and-de-scaling product mixture to a boil for about 10 minutes and allow to cool. After cooling, drain the mixture from the vaporizer and rinse at least twice with clear water. Note also the instructions given by the de-scaling product manufacturer.


Sauna stones

The sauna stone is a natural product. Check the sauna stones at regular intervals. Strong infusion concentrates especially can weaken the sauna stones and cause them to disintegrate over time. Consult your sauna supplier if necessary.

Thoroughly clean the sauna stones provided under running water and then place them in the stone receptacle so that the convection air current can circulate easily between the stones (Illust. 9 + 10).

The number of stones is adequate to create a steam burst, vaporizing about 10 cl of water per m³ cabin volume. Always wait 10 minutes after infusion before repeating the infusion. Only then are the sauna stones sufficiently hot.

Never add more infusion agents or volatile oils than instructed on the packaging. Never use alcohol or undiluted concentrates. Caution! Fire hazard!

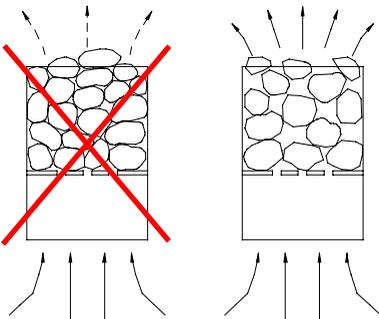

Please be sure to note!



Do not stack the stones in layers; stack them loosely instead, leaving as many spaces as possible to allow the rising hot air to circulate.

Remove stones from the sauna heater only when they are cooled off.

Maintenance and care

All sauna heating units are made of low-corrosion material. Still, to enjoy your sauna heating unit for a long time, you should maintain and care for the unit. To this end, always make sure that the vents and reflection plating in the area of air intake are free of objects. These can easily become clogged with fuzz and dust when drawing in fresh air. This reduces the air convection in the sauna heating unit and can be a cause of unacceptable temperatures.

Clean or de-scale the units when needed. Refer to your sauna supplier or directly to the manufacturing plant in case of defects or signs of wear and tear.

Only use original manufacturer's replacement parts, which can be obtained from your supplier or directly from the manufacturer.

If you do not use your sauna for a significant period of time, always check before next use that cloths, cleansers or other objects have not been placed on the sauna heating unit or the vaporizer before turning them on.

For the installation of sauna heaters, please pay attention to the DIN VDE 0100 part 703 !

This standard makes the following statement valid in your newest expenditure, since February 2006, paragraph 703.412.05; Quotation:

The additional must be planned for all electric circuits of the Sauna by one or more fault current protection device (RCDs) with a calculation difference stream not more largely than 30 mA, excluded of it is Saunaheating.

The EN 60335-1 DIN VDE 0700 part 1 of January 2001 states the following in paragraph 13: quote:

The leakage current may not exceed the following values during operation:

- for stationary heaters of protection class I 0,75 mA; or 0,75 mA each kW input of the appliance, depending on the higher value, at a maximum value of 5 mA.

If the appliance is equipped with a protective device for leakage current (ELCB), please pay attention to the fact that no other electrical units will be protected by this ELCB.

Under current manufacturing methods, it is not yet possible to produce tubular heating elements for sauna heaters which do not attract moisture on each end from the surrounding air. It is also possible that moisture from the surrounding air has been concentrated in the magnesium-oxide filling in the heating elements during transport or storage and is now causing the ELCB to be triggered.

In this case, the oven must be heated up under supervision of an expert, during which the PE conductor is not connected. After about 10 minutes, when moisture has evaporated from the heating elements, the oven must be reconnected to the PE conductor!

If the sauna heater is not in use for a significant period of time, we recommend running it every 6 weeks, so as to avoid moisture concentrating in the heating elements.

Therefore, should the ELCB be triggered during start-up, the electrical installation must be checked.

Installation of the sauna heater and control unit may be undertaken only by an authorized electrician. Without documentation of such installation, a warranty is fundamentally invalid.

Please keep this address in a safe place together with the installation guide.

To help us answer your questions quickly and competently, please provide data printed on the ID plate, to include system type, article no. and serial no., in all inquiries.

Service Address:

EOS-WERKE GÜNTHER GmbH
Adolf-Weiß-Straße 43
35759 Driedorf-Mademühlen, Germany
Fon: +49 (0)2775 82-0
Fax: +49 (0)2775 82-431
servicecenter@eos-werke.de
www.eos-werke.de

Guarantee

The guarantee is taken over according to the legal regulations at present.

Manufacturer's warranty

- The period of warranty starts from the date of purchase and lasts up to 2 years for commercial use and 3 years for private use.

- Always include the completed warranty certificate when returning equipment.

- The warranty expires for appliances which have been modified without manufacturer's explicit agreement.

- Damages caused by incorrect operation or handling through non-authorized persons are not covered under the terms of warranty.

- In the event of a claim, please indicate the serial number as well as the article code number and type name with expressive description of the fault.

- This warranty covers damaged parts but no defects due to wear and tear.

In case of complaint please return the equipment in its original packaging or other suitable packaging (caution: danger of transport damage) to our service department.

Always include the completed warranty certificate when returning equipment.

Possible shipping costs arising from the transport to and from point of repair cannot be borne by us.

Outside of Germany please contact your specialist dealer in case of warranty claims. Direct warranty processing with our service department is in this case not possible.

Equipment start-up date:

Stamp and signature of the authorized electrician:

Handling procedures for return shipments (RMA) - Details for all returns !

Dear customer

we hope that you will rejoice in the ordered articles. Just in case that you are not entirely contented as an exception, please follow the procedures specified below. This enabling us to ensure a quick and smooth handling of the return shipment.

Please absolutely respect for all returns!

- Please add the available **RMA-voucher** always **completely filled out** together with an **invoice copy** to the return shipment! Do not stick it on the goods or on the packaging. **We do not accept the return shipment without these papers.**
- Not prepaid parcels **will be refused** and returned to Sender! Please always ask for the **RMA-No.** for the cheapest return.
- **Please pay attention that** the goods have to be sent back **without visible marks of use** in the **original scope of delivery and in original packing.**
- We recommend to use an **additional solid and break-proof covering box** which should be padded out with styrofoam, paper or similar. Transport damages as a result of faulty packing are for the sender's account.

Form of complaint:

1) Transport damage

- Please check the content of your parcel immediately and advise the forwarding company of a claim (parcel service/ freight forwarder)
- Do not use damaged goods!
- Ask the forwarder **for a written acknowledgement of the damages.**
- **Report the claim promptly by phone to your dealer.** He will discuss with you how to act in this case.
- If the transport box has been damaged, please use an additional covering box. Do not forget to add the **acknowledgement of the damage of the forwarding company !**

2) Faulty goods

- The implied warranty period is 2 years. Please contact your dealer in case of **faulty or wrong articles or missing accessories.** He will discuss with you the individual case and try for immediate and customer-friendly solution.
- For **economic returns** within Germany you will get an **RMA-number from the manufacturer.**
- All returns have to be in the **original packing of the goods with corresponding accessories.** Please repack the goods to avoid damages. In case of wrong delivery, please do not use this article !

3) Problems of installation and functioning

- Please **read the manual carefully first of all** and pay attention to the indicated assembly or installing instructions.
- **Your dealer should be the first contact person** because he knows his products best and also knows possible problems.
- **In case of function problems with an article,** please check at first whether there is an obvious material defect. The quality system in our factory reduces malfunctions of new appliances to almost zero.