

SteamTec Premium



GB Operating instruction

Made in Germany

CE IP x4



Druck Nr. 29343782en 28.09

Table of Contents

1. The functions3

1.1. Setting the time / desired temperature – buttons 2/44

1.2 The aromatic essence.....4

1.3. The extractor4

1.4. The fresh air ventilator4

1.5. Colour-changing light4

2. User Programmes5

3. Flushing and decalcification6

4. Some rules for using the steam generator correctly7

5. Error messages7

Service Address:.....8

Guarantee8

Handling procedures for return shipments (RMA) - Details for all returns !9

- This device has not been designed for being used by persons (including children) that are physically or mentally handicapped or have sensory disabilities. Moreover, it is not allowed to use this device without sufficient experience and/or knowledge, unless these persons will be supervised by persons responsible for their security or in case they have been instructed how to use this device.
- Children are to be supervised in order to make sure that they do not play with this device.

Congratulations:


You have made the right decision in buying an EOS SteamTec Premium steam generator. You have chosen a really high quality product.

On the following pages you will find instructions on how to use and maintain your new steam generator.

We really hope that you will have lots of pleasure from your SteamTec Premium steam generator and would like to thank you for your confidence in our product!

1. The functions

When you are using the steam generator under normal conditions you will notice the display in 5 second cycles between the time and the temperature

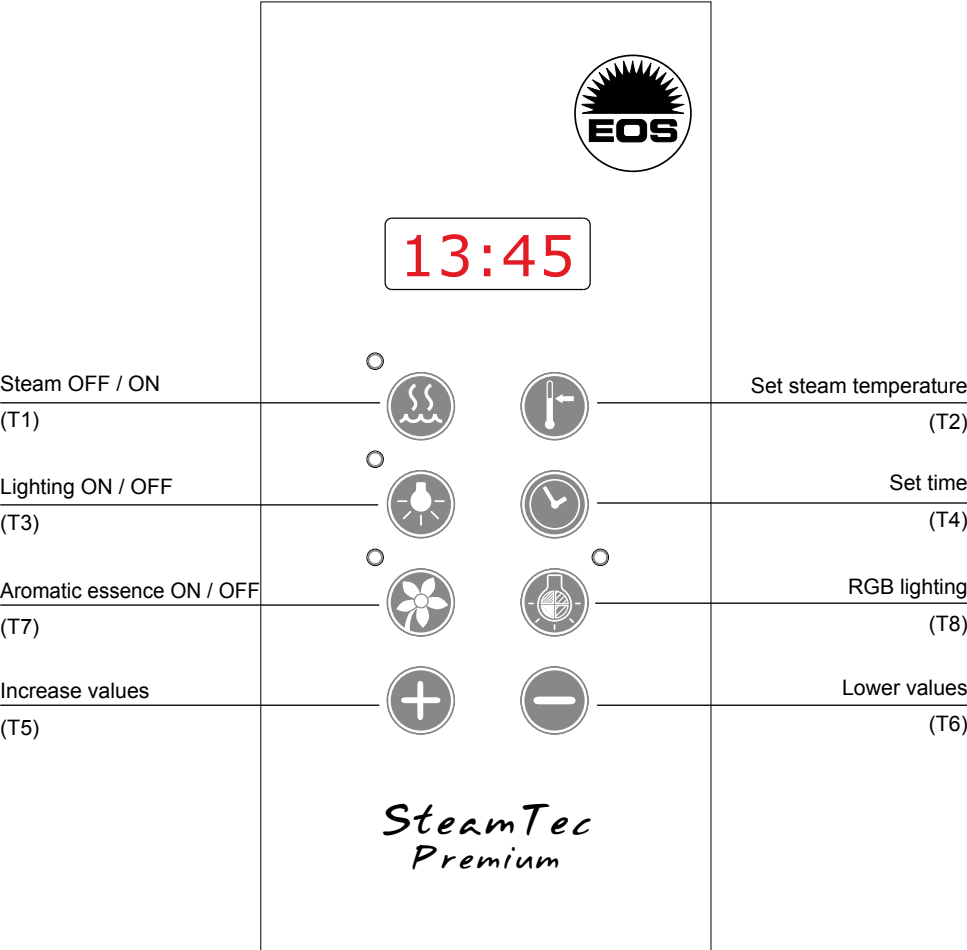

1.1. Setting the desired temperature / time – buttons 2/4

Hold the button down and then press +/- until you see the value you want in each case. The temperature can be set between 30° and 50°C.

1.2 The aromatic essence

After you have pressed Button 7 (essence) the automatic dosage will be turned on or off. When you keep 7 pressed down and also press + or – you can select the exact amount.

Stage 1	2 minutes pause	Pump on for 2 seconds
Stage 2	4 minutes pause	Pump on for 2 seconds
Stage 3	6 minutes pause	Pump on for 2 seconds
Stage 4	8 minutes pause	Pump on for 2 seconds

The essence will not be fed until the temperature is over 30°C inside the cabin itself.

Stage 5 Pump works continually as filled, no temperature limit

If the essence is not being fed automatically, you can sprinkle essence on the steam outlet yourself

1.3. The extractor

(as an extra)

The extractor will come on automatically after you have turned off the steam generator and will operate for 5 minutes: this will make sure that all the steam is drawn out of the cabin. In this way any dampness still inside the cabin will be reduced. Programme stage 5 can be selected to set the extractor for between 5 and 20 minutes. (Please see User Programme No. 2)

1.4. The fresh air ventilator

(as an extra))

This ventilator comes on when steam is produced and will ensure that fresh air enters the cabin: this helps to create better quality steam. The amount of fresh air can be set in five stages. As soon as the required temperature has been reached the ventilator continues to run for 5-7 seconds.

1.5. Colour-changing light


(as an extra)

Use Button 8 to activate the colour-changing light.

The system runs through the colours smoothly in a pre-set pattern. By pressing the button again you can stop on the colour being shown. By pressing a second time the colour-changer is turned off. If you are using a steam generator with extras, you can connect 2 RGB lamps, but no more than that, as extras. You can use an additional module to control another 2 lamps.

2. User Programmes

1. Press T2 and T4 at the same time for about 5 seconds: this will activate the controls for the User Programme function.
2. In the left part of the display you will see programming step P0 and on the right the pre-set parameter value, e.g. for feeding the aromatic essence it will be 03.
3. This step can be used to switch by pressing T1 or T3 from P0 – P2.
4. The parameters can then be set by using the + / - button.
5. After the programming has been completed exit the level by pressing the buttons T2 and T4 simultaneously

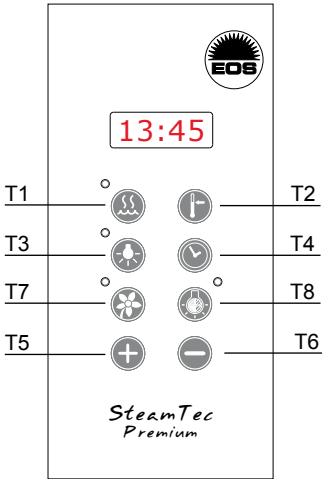

The user can set the following parameters:

Programme	Parameter	Function	Range of Settings
P0	00 01 02	Reserve 1 off Reserve 1 on on/off with RGB-button	00 - 02
P1	00 01	Reserve 2 off Reserve 2 on	00 - 01
P2	05	Extractor run time	05 - 20 min.

2.1 The relays P0-P1 described here can be used with extra modules such as:

- Stars on the ceiling using glass fibre technology
- 230 V – 250 V bench heating ((control unit)
- Audio music

The additional modules that are connected are switched on and off by pressing the Start button T1.

3. Flushing and decalcification

The development of lime scale deposits due to hard water in the tank and on the radiators reduces quite considerably the life of the heating rods.

We recommend that you use a chemical water softener with the steam generator (as an extra) so as to prevent lime scale from developing.

The steam generator is equipped with a fully automatic self-cleaning system (flushing and descaling), which may be programmed at site to match the local water quality.

When the flushing programme is active, after the steam generator has been turned off the flushing / decalcification will start after 30 minutes.

The display will show E35.

E denotes the programme and 35 denotes the time the flushing programme will run.

Whenever the decalcification programme is run, the tube pump will fill up the steam tank with approximately 100 ml of softening agent.

This will be allowed to work for about 30 minutes and then the water with the lime scale in it will be drained out through the electr. ball valve.

The flushing valve flushes the container a second time, the ball valve will close and the flushing programme will come to an end.

The running time for the flushing programme is about 35 minutes.

During this time the steam generator cannot be switched on with T1, the start button.

Check regularly if there is still enough of the cleaner / descaling liquid in the container. When the level in the container remains unchanged over a longer time this may indicate a failure in the cleaning system. Check the steam generator immediately to prevent damages from the scale building inside water tank.

If the level of the cleaner / descaling liquid is too low, an alarm message "F 5" will appear on the display

4. Some rules for using the steam generator correctly

Before you start to enjoy the steam, you should first have a shower to relax and then dry yourself thoroughly, because your skin cannot really perspire unless it is dry.

- After the required cabin temperature has been reached, enter the cabin and close the doors. Do not go anywhere near the steam outlet otherwise you could be scalded by the hot steam (100°C).
- Use your own private health centre only as long as you feel comfortable inside. Set the timer between 15-20 minutes.
- Always be sure to drink enough before and after using the steam generator (mineral water, freshly pressed fruit juice, etc.) in order to balance the loss of fluids. If you drink between two sessions in the steam bath, you will reduce the effects of the body purification process.
- After enjoying a hot steam bath, follow it by a Kneipp treatment by stepping alternately into hot and cold water. This will get rid of the last trace of tiredness, will revitalise your circulation and will guard against calcification of the arteries. It's good for you and, more than that, it is very healthy.
- The steam comes to rest gently on the surface of your skin, penetrates gently into the upper skin layers and thus melts away all those unpleasant feelings you have from tensed muscles.
- As you inhale in this mild, damp warm air (with the recommended cabin temperature between 42° and 45°C) your mucous membranes will be gently dampened and your respiratory tracts cleansed. If you have a chronic illness (such as asthma, hay fever, etc.) you should always ask your doctor before starting to take a steam bath.

5. Error messages

- F1 Breakage in the steam sensor
- F2 Breakage in steam container
- F3 Excess temperature in steam container
- F5 No decalcifier

If you cannot rectify the problems yourself (alarms F 1 – F 5), contact your local dealer or service centre.

Please keep this address in a safe place together with the installation guide.

To help us answer your questions quickly and competently, please provide data printed on the ID plate, to include system type, article no. and serial no., in all inquiries.

Service Address:

EOS-WERKE GÜNTHER GmbH
Adolf-Weiß-Straße 43
35759 Driedorf-Mademühlen, Germany
Fon: +49 (0)2775 82-0
Fax: +49 (0)2775 82-431
servicecenter@eos-werke.de
www.eos-werke.de

Guarantee

The guarantee is taken over according to the legal regulations at present.

Manufacturer's warranty

- The period of warranty starts from the date of purchase and lasts up to 2 years for commercial use and 3 years for private use.
- Always include the completed warranty certificate when returning equipment.
- The warranty expires for appliances which have been modified without manufacturer's explicit agreement.
- Damages caused by incorrect operation or handling through non-authorized persons are not covered under the terms of warranty.
- In the event of a claim, please indicate the serial number as well as the article code number and type name with expressive description of the fault.
- This warranty covers damaged parts but no defects due to wear and tear.

In case of complaint please return the equipment in its original packaging or other suitable packaging (caution: danger of transport damage) to our service department.

Always include the completed warranty certificate when returning equipment.

Possible shipping costs arising from the transport to and from point of repair cannot be borne by us.

Outside of Germany please contact your specialist dealer in case of warranty claims. Direct warranty processing with our service department is in this case not possible.

Equipment start-up date:

Stamp and signature of the authorized electrician:

Handling procedures for return shipments (RMA) - Details for all returns !

Dear customer

we hope that you will rejoice in the ordered articles. Just in case that you are not entirely contented as an exception, please follow the procedures specified below. This enabling us to ensure a quick and smooth handling of the return shipment.

Please absolutely respect for all returns!

- Please add the available **RMA-voucher** always **completely filled out** together with an **invoice copy** to the return shipment! Do not stick it on the goods or on the packaging. **We do not accept the return shipment without these papers.**
- Not prepaid parcels **will be refused** and returned to Sender! Please always ask for the **RMA-No.** for the cheapest return.
- **Please pay attention that** the goods have to be sent back **without visible marks of use** in the **original scope of delivery and in original packing.**
- We recommend to use an **additional solid and break-proof covering box** which should be padded out with styrofoam, paper or similar. Transport damages as a result of faulty packing are for the sender's account.

Form of complaint:

1) Transport damage

- Please check the content of your parcel immediately and advise the forwarding company of a claim (parcel service/ freight forwarder)
- Do not use damaged goods!
- Ask the forwarder **for a written acknowledgement of the damages.**
- **Report the claim promptly by phone to your dealer.** He will discuss with you how to act in this case.
- If the transport box has been damaged, please use an additional covering box. Do not forget to add the **acknowledgement of the damage of the forwarding company !**

2) Faulty goods

- The implied warranty period is 2 years. Please contact your dealer in case of **faulty or wrong articles or missing accessories.** He will discuss with you the individual case and try for immediate and customer-friendly solution.
- For **economic returns** within Germany you will get an **RMA-number from the manufacturer.**
- All returns have to be in the **original packing of the goods with corresponding accessories.** Please repack the goods to avoid damages. In case of wrong delivery, please do not use this article !

3) Problems of installation and functioning

- Please **read the manual carefully first of all** and pay attention to the indicated assembly or installing instructions.
- **Your dealer should be the first contact person** because he knows his products best and also knows possible problems.
- **In case of function problems with an article,** please check at first whether there is an obvious material defect. The quality system in our factory reduces malfunctions of new appliances to almost zero.